



- GB** Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.
- DE** Elektrische Altgeräte dürfen nicht mit den Haushaltsabfällen entsorgt werden. Bitte recyceln Sie dort, wo entsprechende Einrichtungen vorhanden sind. Fragen Sie bei Ihrer örtlichen Behörde oder Ihrem Händler bzgl. Recycling um Rat.
- FR** Les appareils électriques ne doivent pas être jetés avec les déchets domestiques: pensez à les recycler. Renseignez-vous auprès du revendeur ou de votre commune pour en savoir plus.
- ES** Los productos eléctricos de desecho no deben eliminarse junto con la basura doméstica. Por favor, recicle este producto si existen instalaciones para ello. Consulte con la autoridad local o el distribuidor para que le asesore acerca del reciclaje del producto.
- IT** I rifiuti elettrici non dovrebbero essere eliminati insieme ai normali rifiuti casalinghi. Riciclate quando possibile. Contattate le Autorità Locali o il rivenditore per informazioni riguardanti il riciclo.
- PL** Zużytyego sprzątu elektrycznego i elektronicznego nie należy wyrzucać wraz z odpadami komunalnymi. Dlatego zużytyego sprzątu należy przekazać do punktu zbierania zużytyego sprzątu. W celu uzyskania dalszych informacji należy zwrócić się do władz lokalnych lub sprzedawcy detalicznego.
- PT** Os produtos elétricos em fim de vida não devem ser eliminados no lixo doméstico. Por favor, recicle nos locais onde existem instalações para isso. Consulte as suas Autoridades Locais ou o revendedor para obter aconselhamento de reciclagem.
- NL** Elektronische producten mogen niet weggegooid worden bij huishoudelijk afval. Recycle indien hiervoor faciliteiten aanwezig zijn. Raadpleeg uw plaatselijke autoriteit of winkel voor meer informatie over recycling.
- GR** Μη απορρίπτετε τις άχρηστες ηλεκτρικές συσκευές μαζί με τα οικιακά απορρίμματα. Ανακυκλώστε τις στις κατάλληλες εγκαταστάσεις. Ρυθμίστε τις τοπικές αρχές ή τα τοπικά καταστήματα ηλεκτρικών ειδών για την ανακύκλωση ηλεκτρικών συσκευών.
- RU** Электрическое оборудование нельзя выбрасывать вместе с обычным бытовым мусором. Если имеется такая возможность, пожалуйста, сдавайте устройство для вторичной переработки. Рекомендации по утилизации устройства можно получить у продавца или в местных органах власти.



GB mega-sonic® fox repeller instructions

DE Anweisungen für den Mega-Sonic® Fox Repeller

FR Instruction anti-renards Mega-Sonic®

ES Instrucciones para el repelente de zorros mega-sonic®

IT Istruzioni dello scaccia volpi mega-sonic®

PL mega-sonic® odstraszac lisów instrukcje

PT Instruções para o repelente de raposas mega-sonic®

NL mega-sonic® fox repeller instructies

GR Οδηγίες απωθητικού προϊόντος για αλεπούδες mega-sonic®

RU Инструкции к отпугивателю для лисиц mega-sonic®



STV 60

STV International Ltd.

Forge House, Little Cressingham, Thetford, IP25 6ND. United Kingdom.

www.stvpestcontrol.com Tel: +44(0)1953 881580

20/10/17

Detect and deter foxes from lawns, flower-beds and bird feeders using the Mega-Sonic® Fox Repeller from Defenders. The motion-activated repeller detects animal movement to activate a continuously variable sonic burst and flashing red LEDs that deter foxes without harm. The unit is mains powered, with the option of battery power for hard-to-reach areas. Coverage area is up to 10 metres in an 180° arc, creating a protected zone of approximately 100 square metres. The dual outer casing with internal rubber seals gives guaranteed water resistance providing garden protection year-round.

ASSEMBLY AND SITING INSTRUCTIONS

1. Remove all packaging and carefully read the instructions before use.
2. Connect the mains adaptor by opening the rubber portal on the base cover.
3. Alternatively, for battery power open the battery compartment inside the base of the unit. Insert batteries - see power panel below.
4. Turn the unit on using the ON/OFF switch on the base. After a few seconds you will hear an audible signal indicating that the product is functioning correctly.
5. Install the unit either by using the hang hole at the back of the unit, or by inserting the interlocking mounting stake components into the base.
6. This product is intended for OUTDOOR USE ONLY.
7. This product is suitable for use on decking, patios and gardens.
8. Avoid placing in areas where foliage obscures the lens at the front of the unit.
9. Mega-Sonic® Fox Repeller incorporates a PIR (passive infra-red) detection system which monitors a fan shaped area of 80 degree arc up to a distance of 10 metres.
10. This protected zone is approximately 100 square metres of unobstructed space. Animal movement within the zone will trigger a burst of variable high frequency sound as a deterrent.
11. The PIR system enables the unit to remain on standby between activation periods, so maximizing battery life.
12. Position the unit outdoors facing the area most effected by a fox.
13. For best results ensure that the unit is positioned level and fixed at a height of 30 - 40cm above ground level and facing the area affected.
14. The unit can be left on permanently.

POWER

Where mains power is available use the 9 volt mains transformer included.

OR

Requires 2 x Alkaline 6LR61 9v batteries (not included)

COMMON QUESTIONS AND ANSWERS

Does the Mega-Sonic® Fox Repeller hurt or harm pets?

No. It emits a burst of ultrasound which is audible to dogs, cats and foxes and from which they can move away.

How long will the Mega-Sonic® Fox Repeller take to work?

Results can vary. It can take 14-28 days to deliver a full deterrent effect where feeding or fouling is well established and animals visit frequently.

Can ultrasonic waves be obstructed?

YES. Ultrasonic waves can be absorbed by walls, plants and other objects. It is best to install the Mega-Sonic® Fox Repeller in an open unobstructed area.

CARE AND MAINTENANCE

- Turn the unit off whenever pets are at play in the protected zone, or when gardening or, when other human activity is likely to trigger the unit and use battery power unnecessarily
- Do not immerse the unit in water or other liquids
- Do not tamper with the unit's internal components
- From time to time use a damp cloth to wipe the PIR lens clean

TROUBLESHOOTING

- If the unit starts to emit a sound that is audible, it is normally an indication that the batteries need changing.
- In some instances, especially after very heavy rain or extreme cold condensation may form inside the unit and will result in an audible sound being emitted. If the unit does not function silently even with new batteries, place it indoors in a dry location for a day or two to clear the condensation, and normal operation will be restored.

WARNINGS - MAIN UNIT

- This product is suitable for OUTDOOR USE ONLY
- This product is intended for use as an animal deterrent only - not to be handled by children
- An adult must carry out battery replacement and installation
- Remove exhausted batteries from this product
- Do not dispose of batteries in a fire, batteries may explode or leak
- Do not short-circuit the battery terminals
- Do not mix new and used batteries
- Do not mix alkaline standard (carbon-zinc) or rechargeable batteries
- Do not recharge non-rechargeable batteries
- Do not allow any part to come in contact with heat or a direct flame
- When installing (2 x 9V) batteries in the battery compartment, ensure the batteries are placed as marked (+/-)
- Only the recommended batteries should be used
- If any part of the unit is damaged you should stop using it immediately
- Please refer to the packaging or product rating plate for the product class specifications and rating
- Do not operate this product in the packaging

Contains
STV612 Adaptor Kit